


# FITTING INSTRUCTIONS FOR BUCKET SEATS

**1.**


Ensure you have the correct cover for the left or right seat. For seats with separate head-rests, the headrest must be removed first.

Place the seat cover over the back of the seat and pull down. Make sure the front panel is square on the front of the seat.

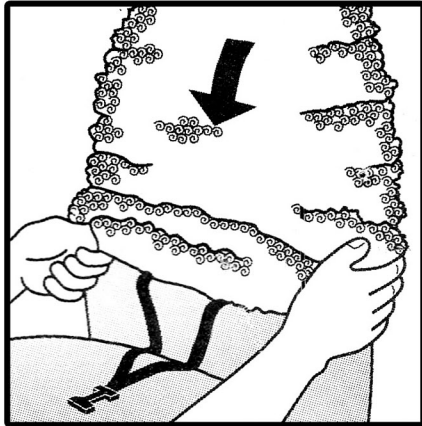


**2.**

Push the centre strap(s) through the middle of the seat, enabling it to be pulled through from behind.

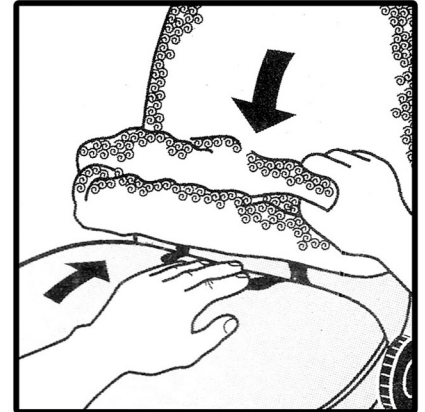


**3.**

Pull the seat cover forward and neatly position the front and side panels down the base of the seat.

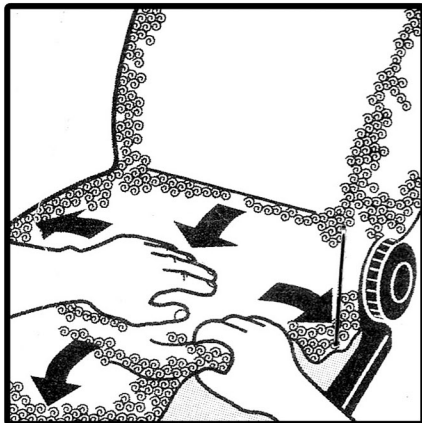


**4.**

For seats with side plastic mouldings it is preferable to position the seat cover between the moulding and the seat thereby allowing access to any seat controls.

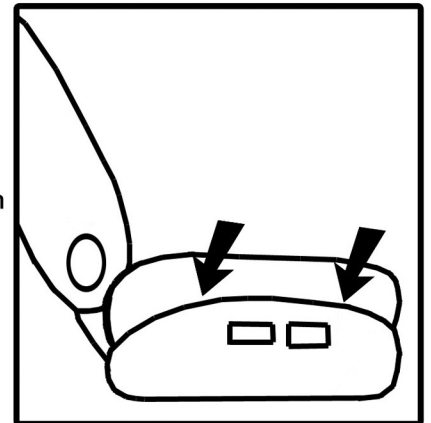

**5.**

Smooth out the seat cover and pull the front tie(s) under the seat. Ensure the centre back seam is straight. The seat cover will mould to the shape of the seat after a couple of uses.

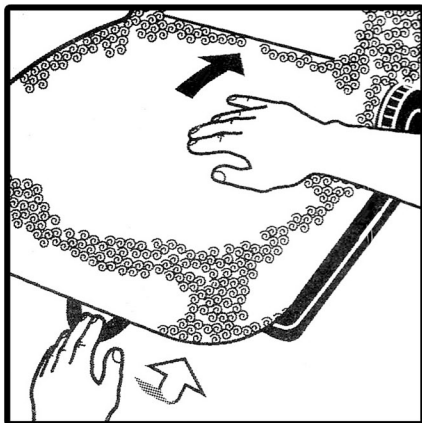

**6.**

Make sure all straps are in position and not interfering with the seat running tracks or other seat controls. Clip together and pull for tension.

