

FITTING INSTRUCTIONS FOR COMMON BENCH SEATS


FULL BACKREST & FULL BASE

1.
Seat bases are generally removed by pushing the base towards the rear of the vehicle and then pulling upwards, releasing clips under the seat. Then pull the base forward and remove.

2.
Once removed the backrest attachment bolts or similar will be exposed. Unfasten the attachment points and the backrest will generally lift upwards for removal.

If any problems are experienced refer to the operators operating manual.

3.
Fit the covers to each piece and refit to the vehicle.

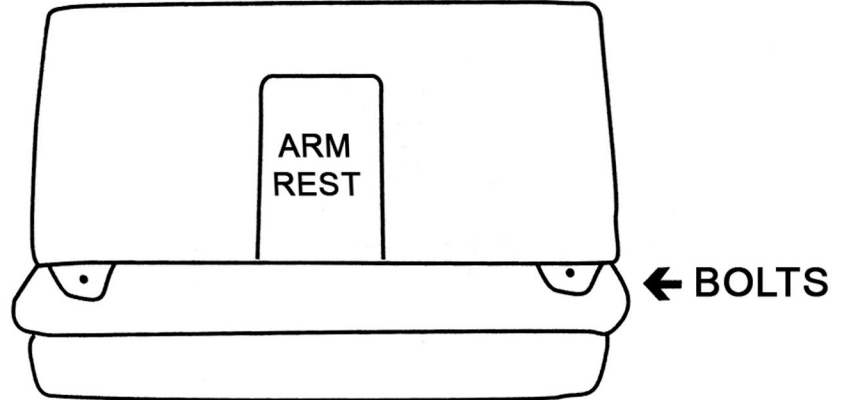

SPLIT BACKREST & FULL BASE

1.
Remove the seat base as per instruction above.

2.
Once removed the Side Bolster attachment bolts or similar will be exposed. Unfasten the attachment points and the bolsters will generally lift upwards for removal.

If any problems are experienced refer to the operators operating manual.

3.
The split sections do not generally need to be removed. Fold each section down individually and fit the covers accordingly.

