



 
SEAT COVER WORLD

How To Remove and Fit The Most Common Rear Seats

A:

To remove a full bench, start by pushing the base in towards the rear of the vehicle and the pull upwards, releasing clips under the seat. Then pull forward to remove seat. Once removed, 2 bolts will be visible. Unscrew both bolts and the backrest will simply lift upwards. Pull forward to remove seat. Fit covers to each piece and re-fit into vehicle. The smaller cover will fit on the base and the larger piece fits on the backrest.


FULL BENCH

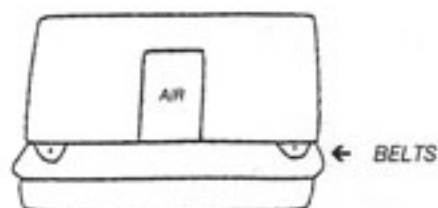

B:

To remove the bench part of seat follow above instructions (refer section A). Once removed, 2 bolts will be visible under each side-bolster. Unscrew both bolts and the side bolsters will simply slide upwards. Pull forward to remove them. The 50/50 split do not need to be removed. Fold each piece down individually and fit covers accordingly. Fit covers on side-bolsters and replace bolts. Fit cover on base, and re-fit into vehicle.

 
50/50 SPLIT BENCH

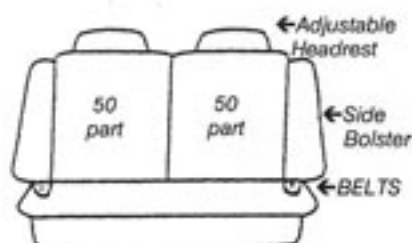

C:

To remove bench part of seat follow above instructions, and fit base of seat cover. The centre of the 3 piece section does not need to be removed, but the piece on either side do need to be removed. Once base is removed, 2 bolts will be visible on the bottom outside of each piece. Fit covers, securing it with ties at the base of each piece. Armrests need to be folded down to fit cover, but do not need to be removed from vehicle.

 3 PIECE SECTION

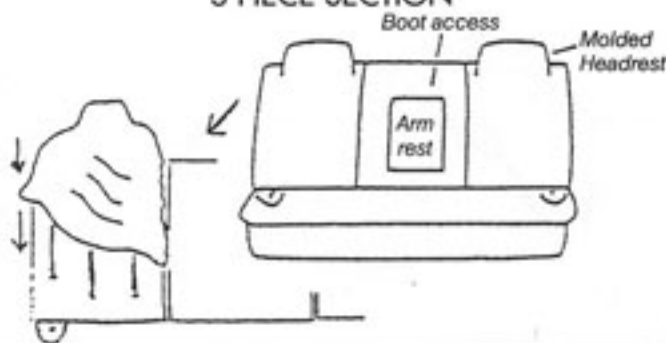

FITTING INSTRUCTIONS:

Due to the foam backing on most seat covers, they tend to stick to the original upholstery while fitting. Grip each seat cover firmly from each corner to fit them effectively. Once covers are fitted, secure them by tying up the ties tightly. Each cover is equipped with matching ties at the front and back of the seat cover piece. In the event of contoured seats, please allow a few weeks for the seat covers to mould into the shape of the seat.